

Cat. No. 21-7013
OWNER'S MANUAL

Please read before using this equipment.

100mW 1-Channel Walkie-Talkie

TRC-1011

NELSET^{TM*}

INTRODUCTION

Your Netset 100mW 1-Channel Walkie Talkie is a portable, easy-to-use, two-way radio that you can carry almost anywhere. It is ideal for use around the house, in your car or boat, on camping trips.

IMPORTANT

Units conform to UK DTI specs. MPT.1320
License is required to operate CB transceivers

Apply for license application form to:

Radio Licensing Centre
Subscription Services Ltd

P. O. Box 885

Bristol

BS99 5LG


© 1993 InterTAN Texas Ins.
All Right Reserved.

INSTALLING THE BATTERY

Your can power your walkie-talkie from a standard 9-volt battery (not supplied). For the longest battery life, we recommd to use an alkaline battery only. If transmission becomes weak, replace the battery with a fresh one.

Follow these steps to install the battery.

1. Remove the battery compartment cover by pressing down the cover and sliding it off.
2. Install the battery into the battery compartment. Be sure to observe the polarity symbols (+ and -) marked inside the battery compartment.

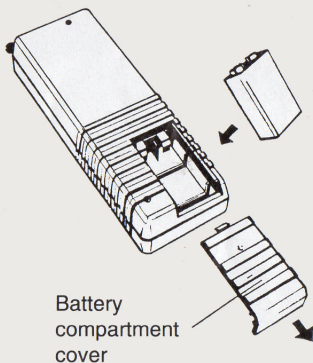

3. Replace the battery compartment cover.

OPERATION

For the best performance, fully extend the telescopic antenna and keep it vertical. Turn on the walkie talkie by rotating **VOLUME** clockwise until it clicks and the LED indicator lights.

Note: The LED indicator goes off when the walkie talkie receives or transmits a message.

RECEIVING

Follow these steps to receive a transmission.

1. Adjust **VOLUME** for a comfortable listening level.
2. When you finish using the walkie-talkie, turn it off by rotating **VOLUME** counterclockwise until it clicks.

TRANSMITTING

Follow these steps to transmit.

1. Turn on the walkie-talkie by rotating **VOLUME** clockwise until it clicks.
2. Press and hold down **PUSH TO TALK**. Then, speak in a normal voice from about 8 cm from the walkie-talkie's speaker.
3. To hear a reply, release **PUSH TO TALK**.
4. When you finish using the walkie-talkie, turn it off by rotating **VOLUME** counterclockwise until it clicks.

MAINTENANCE

Your Netset 100mW 1-Channel Walkie Talkie is an example of superior and craftsmanship. The following suggestions will help you care for the walkie talkie so you can enjoy it for years.

- Keep the walkie talkie dry. If the walkie talkie gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Use and store the walkie talkie only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage battery, and distort or melt plastic parts.
- Handle the walkie talkie gently and carefully. Dropping the walkie talkie can damage the circuit boards and can cause it to work improperly.
- Keep the walkie talkie away from dust and dirt which can cause premature wear of parts.
- Wipe the walkie talkie with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the walkie talkie.
- Use only a fresh battery of the recommend size and type. Always remove an old or weak battery. It can leak chemicals that can destroy electronic circuits.

Modifying or tampering with the walkie talkie's internal components can cause a malfunction and might invalidate its warranty. If your walkie talkie is not performing as it should, take it to your local Tandy store for assistance.

SPECIFICATIONS

Receiver

Channel/Frequency	Channel 3, 27.62125 MHz
Sensitivity (Maximum)	10 μ V for 10 dB (S+N) / N
Adjacent Channel Rejection	90dB
Audio Output	200 mW (10% THD)
Current Drain at No Signal	28 mA to 32 mA

Transmitter

Channel/Frequency	Channel 3, 27.62125 MHz
Power Input at 9V DC	53 mW
Power Output	100 mW
Spurious Emission	85 dB or Better
Type of Modulation	Frequency Modulation
Frequency Tolerance	+/- 600 Hz
Antenna (Telescopic) Impedance	50 Ohms
Antenna Length (Maximum)	800 mm
Current Drain at No Modulation	85 mA to 120 mA
Dimensions	160 \times 56 \times 26 mm (HWD)
Weight (without Battery)	160 gm

InterTAN WARRANTY

InterTAN warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any InterTAN store or dealer and the product will be repaired without charge for parts and labour. InterTAN reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through InterTAN's company owned stores and dealers and to a product that is presented for repair in a country where InterTAN offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which InterTAN operates. This warranty is subject to all statutory rights you may have in the country of purchase.

WE SERVICE WHAT WE SELL

MANUFACTURED IN CHINA. IMPORTED FOR/IMPORTE POUR
InterTAN CANADA LTD., BARRIE, CANADA, L4M 4W5
InterTAN AUSTRALIA LTD. A.C.N. 002 511 944
InterTAN U.K. LTD. WEST MIDLANDS, WS2 7PS
***TRADEMARKS OF InterTAN TEXAS INC.**