

SW1600 Operating Guide

RACEceiver Model SW-1600 Operating Guide

On/Off

- Turn On your *RACEceiver* by pressing the red button (left side) for one second.
- Turn off your *RACEceiver* by pressing and holding the red button (left side) for approx five seconds (until the display shuts off).

Volume Up/ Volume Down

- The default functionality of the two lower buttons is volume control. Press the Right button (>) to increase the volume level and the left (<) to decrease the volume level. Volume level is indicated on the screen. There is also an in-line volume control available. When using this, we recommend backing off full volume in the *RACEceiver* a notch or two, then using the in-line control for adjusting the volume to your needs.

Changing Frequencies/ Channels - IMPORTANT INFO!

- Put the *RACEceiver* in channel change mode by pressing the blue button (right side) for two seconds, until the channel display starts blinking.
- FIRST, use the left side button (red) to move up in 100 channel increments, until you are near the desired frequency. Then use the lower buttons to scroll to the desired channel, and then press the blue button again to lock the channel. When locked on your channel, the display will stop blinking.

"Channel Jump" - "COOL" FEATURE!

- Your *RACEceiver* SW 1600 is programmed to allow you to easily "jump"; between your favorite driver and the Race announcing (like MRN or PRN), which is on channel 000. After locking in your chosen channel, simply press both scroll buttons simultaneously to jump to Channel 000, and then, press both arrow buttons again to jump back!
- **PLEASE NOTE : This feature is for use in USA only.**

Squelch

- Squelch is a filter used to reduce background noise and static. Your *RACEceiver* is equipped with a factory set squelch control. Under most circumstances, you will probably want the squelch ON, so the default setting for your *RACEceiver* is on.
- To turn squelch on/off:
 - To turn squelch off, press the blue Button (middle right) and the down arrow (<) at the same time. The squelch indicator (SQ) will disappear on the screen.
 - To turn squelch on, Press the blue button and the up arrow (>) up at the same time. The squelch indicator will appear

Signal Indicator

- *RACEceiver* has a signal indicator in the upper left of the display that will appear when a signal is being received and will disappear when the signal stops. This feature is automatic and no interaction is required.

Battery

- Your *RACEceiver* is designed to operate with a high quality AAA alkaline battery. A good battery is critical to Receiver's performance. We have found that cheap batteries often do not output the precise voltage needed for correct operation. If your *RACEceiver* ever has poor or inconsistent performance, or if audio quality becomes noisy it is time to replace the battery.
- In between Race events, we suggest removing the battery from your *RACEceiver*. It will increase the life of the battery, and reduces the possibility of acid related corrosion. While the *RACEceiver* will deliver hours of continuous usage on a single battery, always take a few extras just in case you need a new one.