



SOLO II



MAIN CONTROLS/FEATURES

- 1** ON/OFF BUTTON
- 2** CHANNEL/VOLUME DOWN
- 3** CHANNEL/VOLUME UP
- 4** MODE BUTTON
- 5** CHANNEL DISPLAY
- 6** FREQUENCY DISPLAY
- 7** SQUELCH ON/OFF INDICATOR
- 8** VOLUME LEVEL BARS
- 9** LEFT EARPHONE JACK
- 10** RIGHT EARPHONE JACK

840 DERITA ROAD, CONCORD, NC 28027
1-800-272-7111 www.racingelectronics.com



BASIC OPERATION

TO TURN UNIT ON OR OFF. PRESS AND HOLD BUTTON **1** FOR 5 SECONDS

TO INCREASE OR DECREASE VOLUME PRESS BUTTONS **2** OR **3**

CHANGE CHANNELS

PRESS & HOLD BUTTON **4** UNTIL DISPLAY BLINKS
PRESS BUTTON **1** TO ADVANCE 100 CHANNELS AT A TIME

PRESS & HOLD BUTTONS **2** **3** TO INCREASE OR DECREASE FREQUENCY BY ONE

PRESS BUTTON **4** TO LOCK CHANNEL

SQUELCH ON/OFF

TURN SQUELCH OFF - PRESS BUTTONS **2** **4** AT THE SAME TIME

TURN SQUELCH ON - PRESS BUTTONS **3** **4** AT THE SAME TIME

"HOT JUMP" FEATURE

PRESS BUTTONS **2** & **3** SIMULTANEOUSLY TO "JUMP" FROM LOCKED IN CHANNEL TO MRN/PRN. REPEAT TO "JUMP" BACK TO PREVIOUS CHANNEL

TROUBLESHOOTING

- ALL I HEAR IS STATIC - **BE SURE SQUELCH IS ON**
- THE DISPLAY SHOWS NUMBERS COUNTING TO 10 OVER & OVER - **CHANGE THE BATTERY**
- DOES NOT SOUND AS CLEAR AS IT DID THE LAST TIME I USED IT - **CHANGE THE BATTERY**
- IT SOUNDS A LITTLE SCRATCHY OR ROUGH - **BACK THE VOLUME DOWN A NOTCH OR TWO**