

## MEMORY READ



1. Push MEMORY READ button.
2. Rotate main tuning knob to select channel.
3. Note readout for channel selected.

## MEMORY SCAN



1. Push MEMORY READ button.
2. Push SCAN button.
3. Unit scans ten memories.
4. Unit stops on busy channel.
5. Scan resumes on squelch break.
6. Push DIAL to deactivate scanning.

## MEMORY WRITE



1. Push MEMORY READ button.
2. Rotate main tuning knob to select channel.
3. Push MEMORY READ then MEMORY WRITE button in. Hold both buttons in simultaneously while rotating the main tuning knob until desired channel is displayed.
4. Release MEMORY READ and MEMORY WRITE buttons.

NOTE: When the WRITE (Dimmer) button is depressed and the main tuning knob is turned, the display will dim and brighten.

## SEA WATCH



1. Push DIAL button.
2. Rotate main tuning knob to desired channel.
3. Push SEA button.
4. Unit rapidly scans dial channel and channel 16 alternately.
5. If a call comes up on channel 16, the unit will automatically switch to that call.
6. Push DIAL to deactivate sea watch.

## SELECTING A CHANNEL



1. Push POWER switch-activates channel 16.
2. Push DIAL button.
3. Select either USA or INTL channels.
4. Rotate main tuning knob to desired channel.

## CHANNEL SCANNING



1. Turn SQUELCH to desired level.
2. Push DIAL button.
3. Push SCAN button.
4. When a signal is received, scanning stops.
5. Scan resumes when signal is lost.
6. Push DIAL to stop scanning.

## WEATHER CHANNEL



1. Push weather button (WX).
2. Rotate main tuning knob to select weather channel, 0-9.
3. Push SCAN.
4. Unit scans weather channels.
5. Push weather button (WX) to stop scanning.

## HAILER



1. Install external hailing speaker.
2. Push HAILER button on (display begins to flash).
3. Pushing the mic button and talking into the microphone causes the hailer speaker to amplify your voice.