
REGENCY SCANNERS MODEL Z10 OWNER'S MANUAL



PACKING LIST

- 1-Receiver Unit
- 1-DC Power Cord
- 1-Telescopic Antenna with Right-angle Adaptor
- 1-Instruction Manual

INDEX

General Description	2
Front Panel Controls.....	2
Program Panel.....	3
Preparation For Use	4
Prompting Messages.....	5
Programming Channels.....	6
Scanning	8
Scan Delay	9
Scan Speed	9
Manual Operation.....	10
Searching.....	10
Priority	12
Home Installation	13
Mobile (12VDC) Installation	13
Memory.....	14
National Weather Service.....	14
Specifications	14
External Speaker.....	15
Birdies.....	15
Troubleshooting Guide	16
National Frequency List.....	17

MAINTENANCE

All servicing should be referred to the Regency Customer Service Department.
UNAUTHORIZED ADJUSTMENTS MAY DAMAGE THE EQUIPMENT
OR RESULT IN IMPROPER OPERATION AS WELL AS INVALIDATE THE
WARRANTY.

Important

The sections on Preparation for Use and Operation should be thoroughly read before operating the unit. Reading the instructions will result in maximum performance and enjoyment of your radio.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**


GENERAL DESCRIPTION

Your Regency Z10 is a compact, programmable 10 channel, three band, FM monitor receiver for use at home or on the road. It is a double conversion, superheterodyne used to receive the narrow band FM communications in the amateur, public safety and business bands: 30-50, 144-174, and 440-512 MHz.

Sophisticated microprocessor-controlled circuitry eliminates the need for crystals. Instead, the frequency for each channel is programmed through the numbered keyboard similar to the one used on a telephone. A “beep” acknowledges contact each time a key is touched.

Any combination of two to ten channels can be scanned automatically, or the unit can be set on manual for continuous monitoring of any one channel. In addition, the search function locates unknown frequencies within a band.

Other features include scan delay, priority and a bright/dim switch to control the brightness of the 6-digit Vacuum-Fluorescent display. The Z10 can be operated on either 120VAC or 12VDC.

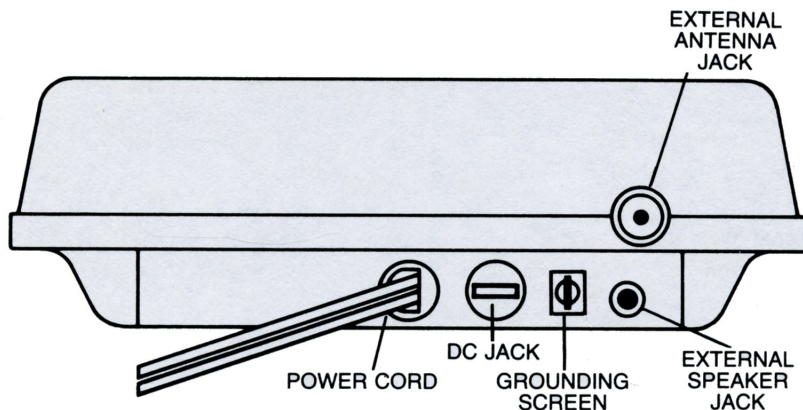

FRONT PANEL CONTROLS

On-Off

Moving this switch to the right provides power to the receiver. When the switch is moved left (OFF) the alarm clock remains operational.

Volume


When moved to the right, the VOLUME knob increases the audio level to the desirable listening level.

Squelch

Eliminates background noise while the unit is scanning or searching until a transmission is received (see page 5).

PROGRAM PANEL

The Z10 has 24-touch entry keys for easy operation.

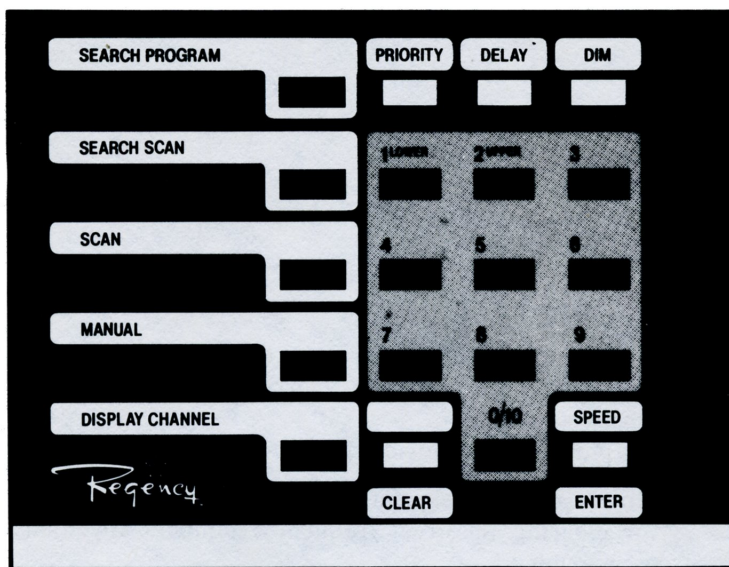


Mode Keys



Pressing the SEARCH SCAN key starts the search process.



Use the SEARCH PROGRAM key prior to entering lower and upper frequencies into the search mode.



Puts the unit into the scan mode.



Selects the priority feature when in the SCAN or MANUAL mode.



Provides for manual selection of any channel and is also used when entering frequencies.



Allows for a delay in the resumption of the SCAN or hold in the SEARCH processes.



Use the DISPLAY CHANNEL key to alternate between channel number and frequency in the display.



The DIM key controls the brightness of the digital display.

Program Keys

The numbered keys are used for entering frequencies as well as selecting the channel number during programming.



NOTE: The  and  keys have two functions: they are number keys when entering frequencies, and are used to enter a frequency as the lower or upper limit to the search.

The following program keys provide special functions:



Provides the decimal point when entering frequencies and also used for clearing incorrect frequency numbers keyed in during programming.




Used for entering a frequency into one of the 10 channels or as a search limit. Also allows a selection of two different scanning speeds.

PREPARATION FOR USE

Before operating your Z10, read the following directions carefully.

1. Unpack the unit from the carton and check for damage. If the unit is damaged, contact the place of purchase immediately as required by the warranty agreement.
2. Plug the end of the AC power cord into a 120VAC outlet (DC operation is covered on page 13).

3. Insert the telescopic antenna into the antenna jack on the back of the scanner using diagram (right).

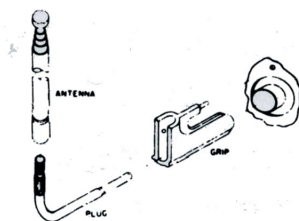


4. Before turning on the receiver, slide the SQUELCH knob all the way to the left.
5. Slide the On-Off switch to the right to apply power to the receiver. Slide the volume knob to the right to increase the volume. Set the knob about halfway prior to programming.
6. To obtain proper scanning action, the squelch knob must be set properly. Slide the knob to the right until noise is heard.

The proper adjustment is the point where the noise just disappears. Slide the squelch knob to the left until this is achieved. Further sliding of the squelch knob past this point may result in poor reception of weaker signals. During SCAN, however, the squelch knob may have to be adjusted slightly to the right to eliminate false stopping.

PROMPTING MESSAGES




Will be displayed upon initial power up or when unit is turned on after power has been disconnected for an extended period of time.




Frequency entered is not within a band (see specifications on page 14 for band limits).




All channels have been locked out during scan mode (see page 9).



Search limits are not within the same band. Also if the upper search limit is lower than lower limit (see page 11).





Blinking “—” after “Ch” — Frequency keyed in has been entered during programming but channel has not yet been selected (see page 7).



Blinking “LO” or “UP” — Frequency has been entered into search program but search limit (lower or upper) has not been selected (see page 10).



Indicates unit is in the search mode (see page 11).



When “LOCK” appears, it indicates that the channel is locked out of the scan sequence (see page 10).



Delay feature has been selected in either search or scan mode (see page 9).



Hold feature has been selected in SEARCH mode only (see page 11).



Priority feature has been selected (see page 12).

PROGRAMMING CHANNELS

The Z10 has 10 channels available for your personal choice of frequencies. The sophisticated microprocessor-controlled circuitry eliminates the need for crystals and allows easy fingertip touch entry of all data.

Programming is done while in the MANUAL mode.

Example: Entering the frequency 465.250 into Channel 1.




1. PRESS:

Each key will “beep” when touched.

(a “beep” verifies contact).

Display:



The Z10 can display either the channel number or the frequency. When you first press **MANUAL** the channel number appears in the display. To display the frequency, push the **DISPLAY CHANNEL** button.

Display:



Pressing the **DISPLAY CHANNEL** button a second time will cause the display to alternately flash the channel number and the frequency.

NOTE: When programming the unit for the first time you will notice that the channels have been pre-programmed to 10 of the most popular frequencies. Entering your choice of frequencies will erase the pre-programmed frequencies.

2. PRESS:



After pressing "Enter", "Ch" will blink indicating the unit is waiting for you to put the frequency into a specific channel.

NOTE: If incorrect frequency numbers have been keyed in, you may clear and



begin again by pressing the **CLEAR** key. If the decimal point had not yet been keyed in, press the **CLEAR** key twice.

3. PRESS:



Display:



Frequency 465.250 is now in Channel 1. Repeat this procedure for each channel to be programmed. Whenever a frequency is programmed into a channel that was locked out in the scan sequence, that channel is now automatically locked in again.

NOTE: If you enter an invalid frequency,



will appear in the display.

A black rectangular button with the word "MANUAL" in white capital letters on the left and a small square icon on the right.

PRESS:

and begin again.

A black rectangular button with the word "MANUAL" in white capital letters on the left and a small square icon on the right.

IMPORTANT: Each time the purpose of entering a frequency, the scanning process immediately stops. The channel and frequency displayed in the digital readout will in no way be affected when you enter the new frequency, unless it is the one you wish to change.

Programming Hints

A black rectangular button with the word "MANUAL" in white capital letters on the left and a small square icon on the right.

1. When programming numerous channels, does not have to be pressed before keying in each frequency. Simply begin with step 2 on page 7 to enter additional frequencies.
2. If an invalid frequency entry is made ("Fr Err" in readout), you may enter the

A black rectangular button with the word "MANUAL" in white capital letters on the left and a small square icon on the right.

correct frequency without pressing

first.

3. If you wish to move a frequency from one channel to another such as from channel 1 to channel 8:

A black rectangular button with the word "MANUAL" in white capital letters on the left and a small square icon on the right.

PRESS:

A black rectangular button with the word "SPEED" in white capital letters.

repeatedly or press and hold down until channel 1 is reached.

3. **PRESS:**

A black rectangular button with the word "ENTER" in white capital letters.

followed by



Now the frequency that was in channel 1 is in channel 8.

NOTE: The frequency is in both channels, 1 and 8. It has not automatically been erased from Channel 1. You must re-program channel 1 to change the frequency.

SCANNING

After you have programmed the frequencies of your choice, you can scan each one automatically when in the scan mode. To start the scanning process press

A black rectangular button with the word "SCAN" in white capital letters on the left and a small square icon on the right.

If necessary, adjust the squelch control by sliding the knob to the left until proper scanning action is obtained (see page 5).

The display will show the NUMBER of each channel as it is scanned. If a transmission is found, the scanner will stop and the display will show the channel number or frequency, or alternate between both depending on the display channel status.

At the conclusion of the transmission, scanning will resume automatically.

If, while scanning, you wish to omit a channel from the scan process, simply touch the channel's number. This is referred to as "locking out" a channel. A channel can only be locked out while the unit is in the scan mode (scanning or stopped on a channel). If all channels are locked out, the display will show:



To put the channel(s) back in, simply touch the channel's number 1, 5, 7, etc.

Scan Delay

During the SCAN mode, you may want to delay resumption of the scan process in order to hear a reply that might otherwise be missed once the unit has gone on to



scan other channels. To do this, press  WHILE THE UNIT IS SCANNING. "DELAY" will appear in the display:



Now, whenever a signal is received, the unit will stop on the channel and broadcast the message. At the conclusion of the message, the unit will wait approximately 2 seconds before scanning. To de-activate DELAY, press



 again. The "DELAY" will disappear from the display.

Scan Speed

During the SCAN mode, you may choose between two scan speeds. Normal



scan speed is approximately 15 channels per second. By pressing the key, you can slow down the scan speed to approximately 5 channels per second.

Manual Operation

If at any time you wish to monitor one channel continuously, press



The unit will stop on a channel at random.



PRESS

repeatedly, or press and hold down for at least one second, until the desired channel is reached. Any channel selected in manual that had previously been “locked out” during scan will be displayed with “LOCK” showing in the display.




Example:

SEARCHING

The Z10 digital scanner includes a search function that enables you to locate new frequencies in addition to those you already know. It can locate active frequencies anywhere within a band.

Two frequencies (lower and upper) are used in the search mode. For example, to search for unknown active frequencies between 460.350 and 461.350 MHz:

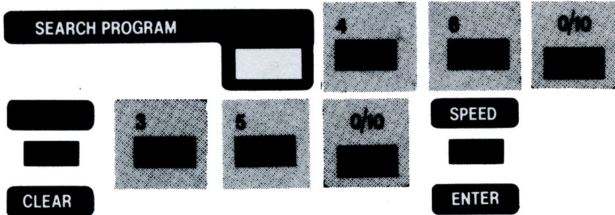

PRESS:

The display will alternately blink “LO” and “UP” indicating the unit is waiting for you to select a limit.

NOTE: If incorrect frequency numbers have been keyed in, you may clear and




begin again by pressing the **CLEAR** key. If the decimal point had not yet been keyed in, press the **CLEAR** key twice.




Then, press:

Frequency 460.350 is now entered as the lower limit to the search.

If you enter an invalid frequency,  will appear in the display. Simply re-enter a valid frequency.

PRESS:

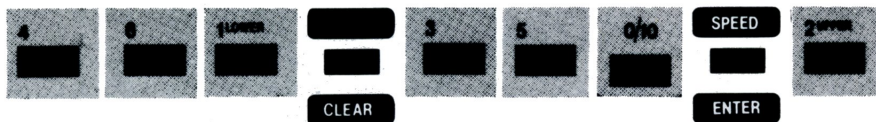

Frequency 461.350 is entered as the upper limit to the search.

NOTE: If the frequency entered is not within the same band as the lower limit, or if it is lower than the lower limit, "SR ERR" will appear in the display.

NOTE: Programming the SEARCH frequencies has no effect on the frequencies that have been programmed into SCAN or MANUAL channels 1 and 2.

NOTE: If incorrect frequency numbers have been keyed in, you may clear and

begin again by pressing the  key. If the decimal point had not yet been keyed in, press the CLEAR key twice.



To start the search, press

The display will initially show "SEARCH," "DELAY," and the lower limit.



Example:

NOTE: Be sure squelch control is set to eliminate background noise.

The unit will now automatically sample every frequency within the limits you have selected. When an active frequency is found, the unit will stop searching, display the frequency and broadcast the message.

With the "DELAY" in the display, the unit will wait approximately 4 seconds following the conclusion of the message before it resumes searching. If you wish

to select HOLD instead, simply press . An "HOLD" replaces the "DELAY" in the display. Now, when the unit finds a frequency during search, it will hold or stay on that frequency and not resume searching until you:



1) press

to step it off the frequency, or 2) press

DELAY

to re-activate the 4 second delay.

NOTE: You cannot eliminate both DELAY and HOLD.

When the unit reaches the upper limit of the search it will automatically return to the lower limit and begin again. If at any time you wish to verify the limits you

SEARCH PROGRAM

have set for the search, press

(twice to see both limits).

If you decide to change modes (i.e. Manual or Scan) while the unit is searching, you may do so. The unit will remember at what frequency the search was

SEARCH SCAN

interrupted. To resume the search, press

and the unit will continue the search from that frequency.

You also have the option of entering frequencies found while searching directly into one of the 10 scan channels. For example: entering a frequency found in search into channel 5.

When the unit stops on an active frequency.

SPEED

5

ENTER

PRESS:

NOTE: You must press "ENTER" while the Search is still stopped on the frequency.

Now the frequency found in search is entered into channel 5. Other frequencies found while searching can be entered into any of the other scan channels the same

SEARCH SCAN

way. Press

to resume the search.

NOTE: In the Search mode it is recommended that you limit the search range to 1 MHz or less. Your chances of catching an unknown active frequency will be considerably greater since transmissions are usually short.

PRIORITY

This is a special feature that lets you program your favorite frequency to be sampled approximately once every two seconds and also to have it override calls on other channels. Channel 1 has been set aside for this function. Enter your favorite frequency into channel 1 then press the PRIORITY button.

NOTE: PRIORITY is active only in the MANUAL or SCAN modes. The display will indicate priority with "PRIORITY".

While the unit is in MANUAL or scanning, the display will blink each time channel 1 is sampled. Any audio will also be briefly interrupted. Should a transmission begin on channel 1, the unit will go immediately to it and receive the message. After the message, the unit will resume scanning or return to the other channel. To de-activate priority, press the PRIORITY switch.

HOME INSTALLATION

Plug the end of the AC cord into a 120 volt wall outlet. Your unit requires very little ventilation, however very warm locations such as near radiators or heating vents should be avoided.

The telescopic antenna will be adequate in areas of moderate signal strength. In areas of very low signal strength, it may be necessary to use a better antenna system for proper reception. An external antenna mounted as far above the ground as practical will greatly increase the signal strength. If it is determined that proper reception will require an external or outside antenna, it is suggested that a tri-band antenna that covers both VHF bands (30-50 MHz and 146-174 MHz) and UHF be used. An external antenna jack is located on the rear panel of your unit should you wish to use one (see page 2).

IMPORTANT: Be sure the antenna system you select is grounded to protect against voltage surges and built up static charges. In addition, the antenna should be located away from power lines.

For proper input matching, 50 ohm coaxial cable should be used. A Motorola type antenna plug (Cinch-Jones No. 13B or H. H. Smith No. 1200) will have to be installed on the receiver end of the cable in order to utilize the antenna socket located on the rear panel (see diagram on page 2).

MOBILE (12VDC) INSTALLATION

NOTE: Mobile reception of a POLICE frequency by UNAUTHORIZED personnel is ILLEGAL in some areas. It is the responsibility of the person making the installation to be sure that the user of this receiver is authorized or cleared through the local police department. Under no conditions can Regency Electronics, Inc., the manufacturer of this set, be held responsible for its unauthorized installation or use.

The receiver can be used in any car, truck, boat, etc. that has a 12 volt negative ground electrical system. Plug the DC cord into the red receptacle on the receiver's rear panel. Connect the opposite end of the red DC cord to the positive (+) battery terminal for direct wiring, or to accessory terminal if radio is to be turned off with the ignition switch. A black ground wire included with the DC cord must be connected from the grounding screw on the rear panel of the radio (see page 2) to the nearest negative or ground point in the system.

If an antenna other than the telescopic one is desired for better reception, see your local Regency dealer.

MEMORY

Your Regency Z10 is equipped with a permanent backup system. No batteries are required. A special capacitor retains stored frequencies for approximately 1 week during a power outage or storage.

NATIONAL WEATHER SERVICE

The National Weather Service provides a continuous (24-hour) broadcast of local and area weather conditions. These weather messages are repeated until the next or updated report is issued. The Weather Service has broadcast facilities in many metropolitan areas of the country.

If you are located within 25 or 30 miles of one of these cities, reception can usually be obtained with the telescopic antenna supplied with the unit. Your local Regency dealer can advise you about your specific antenna requirement.

Note: When set to automatic scan, the unit will stop and remain on the Weather Channel (because it broadcasts continuously). Thus, this channel should only be activated when you desire to hear the current weather report.

SPECIFICATIONS

(Subject to change without notice)

Frequency Ranges:

VHF (Low Band)	30-50 MHz
VHF (Amateur)	144-148 MHz
VHF (High Band)	148-174 MHz
UHF (Amateur)	440-450 MHz
UHF (Standard)	450-470 MHz
UHF (Extended)	470-512 MHz

Search Frequency Increments:

VHF	5 KHz
UHF	12.5 KHz

Sensitivity (12 DB Sinad; at tune-up)

LO VHF (30-50 MHz)	0.35 μ V
HI VHF (144-174 MHz)	0.45 μ V
UHF (440-512 MHz)	0.5 μ V

Sensitivity (12 DB Sinad; maximum)

LO VHF (30-33 MHz, 48-50 MHz)	0.7 μ V
LO VHF (33-48 MHz)	0.5 μ V
HI VHF (144-146 MHz, 170-174 MHz)	0.7 μ V
HI VHF (146-170 MHz)	0.5 μ V
UHF (440-450 MHz)	0.9 μ V
UHF (450-495 MHz)	0.7 μ V
UHF (495-512 MHz)	1.0 μ V

Threshold Squelch Less than 12 DB Sinad

Selectivity ± 7.5 KHz @ 6 DB

± 18 KHz @ 50 DB

Spurious Rejection (except Primary Image) 50 DB

Primary Image

VHF (Low Band)	50 DB
VHF (High Band)	30 DB
UHF	12 DB

Specifications (continued)

Modulation Acceptance	± 7.5 KHz
I.F. Frequencies	1st IF: 10.7 MHz; Crystal Filter 2nd IF: 455 KHz; Ceramic Filter
Reference Oscillator (Synthesizer)	Crystal Controlled
Scanning Rate	approx. 15 channels per second
Search Scanning Rate	
VHF	approx. 17 seconds per megaHertz
UHF	approx. 6 seconds per megaHertz
Scan Delay	
Normal	approx. 0.6 seconds
With Delay Option	approx. 2 seconds
Search Delay	approx. 4 seconds
Priority Sampling Rate	approx. 2 seconds
Audio Output	1W (a 10%, or less Distortion
Speaker (Internal)	16 Ohms, 2¼" Round
Speaker (External)	16 Ohms, min.
Power Requirements	110-130 VAC, 60 Hz; 12 Watts max. 11.5-15 VDC; 7 Watts max.
Display (Frequency & Message Readout)	6 Digits, VFD Type
UL Listed	Radio Receivers, Audio Systems and Accessories
FCC Certified	Part 15, Subpart C
Size	10¾" Wide × 2⅞" High × 8⅜" Deep
Weight	XX Lbs.

EXTERNAL SPEAKER

An external (or remotely mounted) 16 ohm speaker can be used by merely inserting the mating phone plug into the 3.5mm jack on the unit's rear panel (see rear panel diagram on page 2). A 16 ohm speaker is recommended for optimum performance. Do NOT use a 4-8 ohm speaker. The internal speaker is automatically disconnected when an external speaker is used.

BIRDIES

Every complex receiver has frequencies that are difficult or impossible to receive because of internally generated signals. These frequencies are called "birdies". The following is a partial list of such frequencies that may occur in the Z10.

Low VHF (30-50 MHz)	High VHF (144-174 MHz)	UHF (440-512 MHz)
30.730	145.600	478.100
32.100	153.675	
33.600	156.800	
39.200	163.920	
40.980		
44.800		
46.360		
46.385		

In addition, there are other frequencies that are difficult to receive because of interference from externally generated signals, such as T.V. stations, other receivers nearby and various other sources of man-made noise. These frequencies vary from location to location and are therefore impossible to list. When this type of interference is encountered, it can sometimes be eliminated by moving the Squelch Control knob counterclockwise (increase squelch action).

TROUBLESHOOTING GUIDE

NOTE: Please perform the simple checks indicated for improper operation before returning the unit for service.

TROUBLE	CHECK
No display, no sound	Slide the volume knob to the right. Power Cord (AC or DC Connection). See also specifications for power requirements. DC cord — Replace 1.5 AMP fuse if blown.
Display, no sound	Volume Control setting — check by sliding to the right.
No reception (no station heard)	Squelch Control setting — see page 5. Antenna not installed. Incorrect frequencies entered.
Weak or poor reception	Antenna should be fully extended. Stations too far away; external antenna may be needed. See page 13. Incorrect frequencies entered.
Does not scan	If in Manual mode, press SCAN. Channels locked out — see page 10. Squelch control setting — see page 5.
Search Scan stops on channels without stations	Birdies — see page 15.
“Fr Err” appears in readout	Invalid frequency entered—see page 7.
“Pr OFF” appears in readout	Initial power-up, proceed with programming. Power failure — unplugged for an extended period of time.

NATIONAL FREQUENCIES

The following is a partial list of the common public service band frequencies as allocated by the FCC. You will not be able to pick up activity on every frequency listed here. Only those frequencies assigned to the services which are applicable to your area will be received. We advise you to compile your own frequency list for your monitoring area.

Abbreviations	
Automobile Emergency	Auto Emerg.
Business	Bus.
Bureau of Reclamation	Bur. Reclam.
Forestry-Conservation	For.-Cons.
Forest Products	For. Prod.
Government	Govt.
Highway Maintenance	Hwy.
Local Government	Local Govt.
Manufacturers	Manu.
Mobile Telephone	Mob. Tel.
Motion Picture	Mot. Pic.
National Weather Service	NWS
Petroleum Industry	Pet.
Power Utilities	Power
Railroad	RR
Relay Press	Rel. Press
Remote Broadcast	Remote Broad.
Special Emergency	Spec. Emerg.
Special Industrial	Spec. Ind.
Telephone Maintenance	Tel. Maint.
Weather	WX

Frequency — MHz	Service or Allocation	Frequency — MHz	Service or Allocation
LOW VHF BAND 30-50 MHz		HIGH VHF BAND (Continued)	
30.00-30.56	Government	152.870-153.035	Remote Broad., Spec. Ind., Mot. Pic.
30.58-30.64	Special Industrial	153.050-153.380	Manu., Pet., For. Prod.
30.66-31.24	Pet., For.-Cons., For. Prod., Bus.	153.410-153.710	Power, Pet., For. Prod.
31.26-31.98	Spec. Ind., For.-Cons.	153.755-154.115	Fire, Local Government
32.00-33.00	Government	154.130-154.445	Fire
33.02-33.16	Spec. Ind., Hwy., Spec. Emerg., Bus.	154.450-154.625	Bus., Pet., Spec. Ind.
33.18-33.38	Petroleum	154.650-155.145	Police, Local Government
33.42-33.98	Fire	155.160-155.400	Police, Spec. Emergency
34.00-35.00	Government	155.415-156.030	Police, Local Government
35.02-35.18	Business	156.045-156.240	Police, Hwy., Maintenance
35.22-35.66	Mobile Telephone, Paging	156.275-157.450	Marine
35.70-35.98	Special Industrial, Business	157.470-157.500	Auto Emergency
36.00-37.00	Government	157.530-157.740	Business, Taxi
37.02-37.42	Police, Local Government	157.755-158.115	Mobile Telephone, Paging
37.44	Forest Products	158.130-158.460	Manu., Power, Pet., For. Prod.
37.46-37.86	Power	158.475-158.715	Mobile Telephone
37.88-37.98	For. Prod., Hwy., Spec. Emerg.	158.730-158.970	Police, Local Government
38.00-39.00	Government	158.985-159.210	Police, Hwy. Maintenance
39.02-39.98	Police, Local Government	159.225-159.465	Forestry-Conservation
40.00-42.00	Government	159.495-160.200	Motor Carriers (Buses, Trucks)
42.02-42.94	Police	160.215-161.565	Railroad
42.96-43.18	Special Industrial, Business	161.600-161.625	Marine
43.22-43.68	Mobile Telephone, Paging	161.640-161.760	Marine, Remote Broadcast
43.70-44.60	Motor Carrier (Buses, Trucks)	161.775-162.025	Marine
44.62-45.06	Police, For.-Cons.	162.026-162.175	Bureau of Reclamation
45.08-45.66	Police, Local Government	162.400	NWS (WX-2)
45.68-46.04	Police, Hwy., Spec. Emerg.	162.475	NES (WX-3)
46.06-46.50	Fire	162.550	NWS (WX-1)
46.52-46.58	Local Government	163.125	Indian Affairs
46.60-47.00	Government	163.175	Bureau of Reclamation
47.02-47.40	Highway Maintenance	163.250	Special Emergency
47.42	Red Cross	163.275	National Weather Service
47.44-47.68	Spec. Ind., Spec. Emerg.	163.385-163.975	Military, Government
47.70-48.54	Power	164.025-164.075	U.S. Coastal & Geodetic Survey
48.56-49.58	Pet., For. Prod., Spec. Ind.	164.175-165.190	Bur. Reclam., Government
49.60-50.00	Government	166.250	Fire
HIGH VHF BAND 144-174 MHz		169.300	Federal Aviation Administration
144.00-148.000	Amateur	169.425-169.525	Bus., Power, Pet., For. Prod., Spec. Ind., RR
148.150	Civil Air Patrol	170.150	Fire
148.200-150.800	Government	170.200-170.220	U.S. Coastal & Geodetic Survey
150.815-151.475	Bus., Auto Emerg., For.-Cons., Hwy.	170.225-170.325	Bus., Power, Pet., For. Prod., Spec. Ind., RR
151.490-151.595	Special Industrial	170.425-170.475	Forestry-Conservation
151.625-151.955	Business	170.575	Forestry-Conservation
152.000-152.255	Mobile Telephone	171.025-171.125	Bus., Power, Pet., For. Prod., Spec. Ind., RR
152.270-152.480	Business, Taxi		
152.495-152.855	Mobile Telephone, Paging		

HIGH VHF BAND (Continued)

171.475-171.575	Forestry-Conservation
171.825-171.925	Bus., Power, Pet., For. Prod., Spec. Ind., RR
172.225-172.275	Forestry-Conservation
172.375	Forestry-Conservation
172.775	National Parks
173.025	National Weather Service
173.075	U.S. Coastal & Geodetic Survey
173.200-173.400	Police, Power, Pet., For. Prod., Mot. Pic., Rel. Press. Spec. Ind., Manu., Bus., L. Govt.

STANDARD UHF BAND 440-470 MHz

440.000-450.000	Amateur
450.050-450.950	Remote Broadcast
451.025-451.150	Power Utilities
451.175-451.750	Power, Pet., For. Prod., Manu., Tel. Maint.
451.775-452.025	Special Industrial
452.050-452.500	Power, Pet., For. Prod., Spec. Ind. Manu., Tel. Maint.
452.525-452.600	Auto Emergency
452.625-452.950	Power, Pet., For. Prod., Spec. Ind. Manu., Tel. Maint., Motor Carrier, RR
452.975-453.000	Relay Press
453.025-454.000	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Local Govt., Police, Fire, Hwy., For-Cons.
454.025-454.650	Mobile Telephone
455.025-454.925	Remote Broadcast
456.025-456.150	Power Utilities

EXTENDED UHF BAND 470-512 MHz

A number of the larger cities or metropolitan areas may utilize some of the lower UHF TV channels for land mobile radio services. UHF TV channels 14 through 20 are re-allocated in these cities as follows:


City/Area	Channel	Frequency Range
Boston	14, 16	470-476 MHz, 482-488 MHz
Chicago	14, 15	470-476 MHz, 476-482 MHz
Cleveland	14, 15	470-476 MHz, 476-482 MHz
Dallas/Fort Worth	16	482-488 MHz
Detroit	15, 16	476-482 MHz, 482-488 MHz
Houston	17	488-494 MHz
Los Angeles	14, 20	470-476 MHz, 506-512 MHz
Maryland	18	494-500 MHz
Miami	14	470-476 MHz
New York	14	470-476 MHz
Northeastern		
New Jersey	15	476-482 MHz
Oakland	17	488-494 MHz
Philadelphia	19, 20	500-506 MHz, 506-512 MHz
Pittsburgh	14, 18	470-476 MHz, 494-500 MHz
San Francisco	16	482-488 MHz
Washington, D.C.	17	488-494 MHz

STANDARD UHF BAND (Continued)

456.175-456.700	Power, Pet., For. Prod., Manu., Tel. Maint.
456.725-457.025	Special Industrial
457.050-457.500	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Motor Carrier, RR, Taxi
457.525-457.600	Business
457.625-457.950	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Motor Carrier, RR
457.975-458.000	Relay Press
458.025-459.000	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Local Govt., Police, Fire, Hwy., For-Cons., Spec. Emerg.
459.025-459.650	Mobile Telephone
460.025-460.625	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Police, Spec. Emerg.
460.650-462.175	Business
462.200-462.450	Manufacturers
462.475-462.525	Power, Pet., For. Prod., Manu., Tel. Maint.
462.750-462.925	Business
462.950-463.175	Police, Special Emergency
463.200-465.000	Business
465.025-465.625	Power, Pet., For. Prod., Spec. Ind., Manu., Tel. Maint., Police
465.650-467.175	Business
467.200-467.450	Manufacturers
467.475-467.525	Power, Pet., For. Prod., Manu., Tel. Maint.
467.750-467.925	Business
467.950-468.175	Police, Special Emergency
468.200-469.975	Business

Each 6 MHz segment (or channel) has the same allocation pattern as illustrated below for channel 14:

Frequency — MHz	Service or Allocation
470.0125-470.2875	Mobile Telephone
470.3125-471.1375	Public Safety
471.1625-471.2875	Reserve Pool A
471.3125-471.4125	Power, Telephone Maintenance
471.4375-471.6375	Special Industrial
471.6625-471.7875	Reserve Pool A
471.8125-472.3375	Business
472.3625-472.4375	Taxi
472.4625-472.7875	Motor Carrier, RR, Auto Emerg.
472.8125-472.9875	Pet., For. Prod., Manu.
473.0125-473.2875	Mobile Telephone
473.3125-474.1375	Public Safety
474.1625-474.2875	Reserve Pool A
474.3125-474.4125	Power, Telephone Maintenance
474.4375-474.6375	Special Industrial
474.6625-474.7875	Reserve Pool B
474.8125-475.3375	Business
475.3625-474.4375	Taxi
475.4625-475.7875	Motor Carrier, RR, Auto Emerg.
475.8125-475.9875	Pet., For. Prod., Manu.

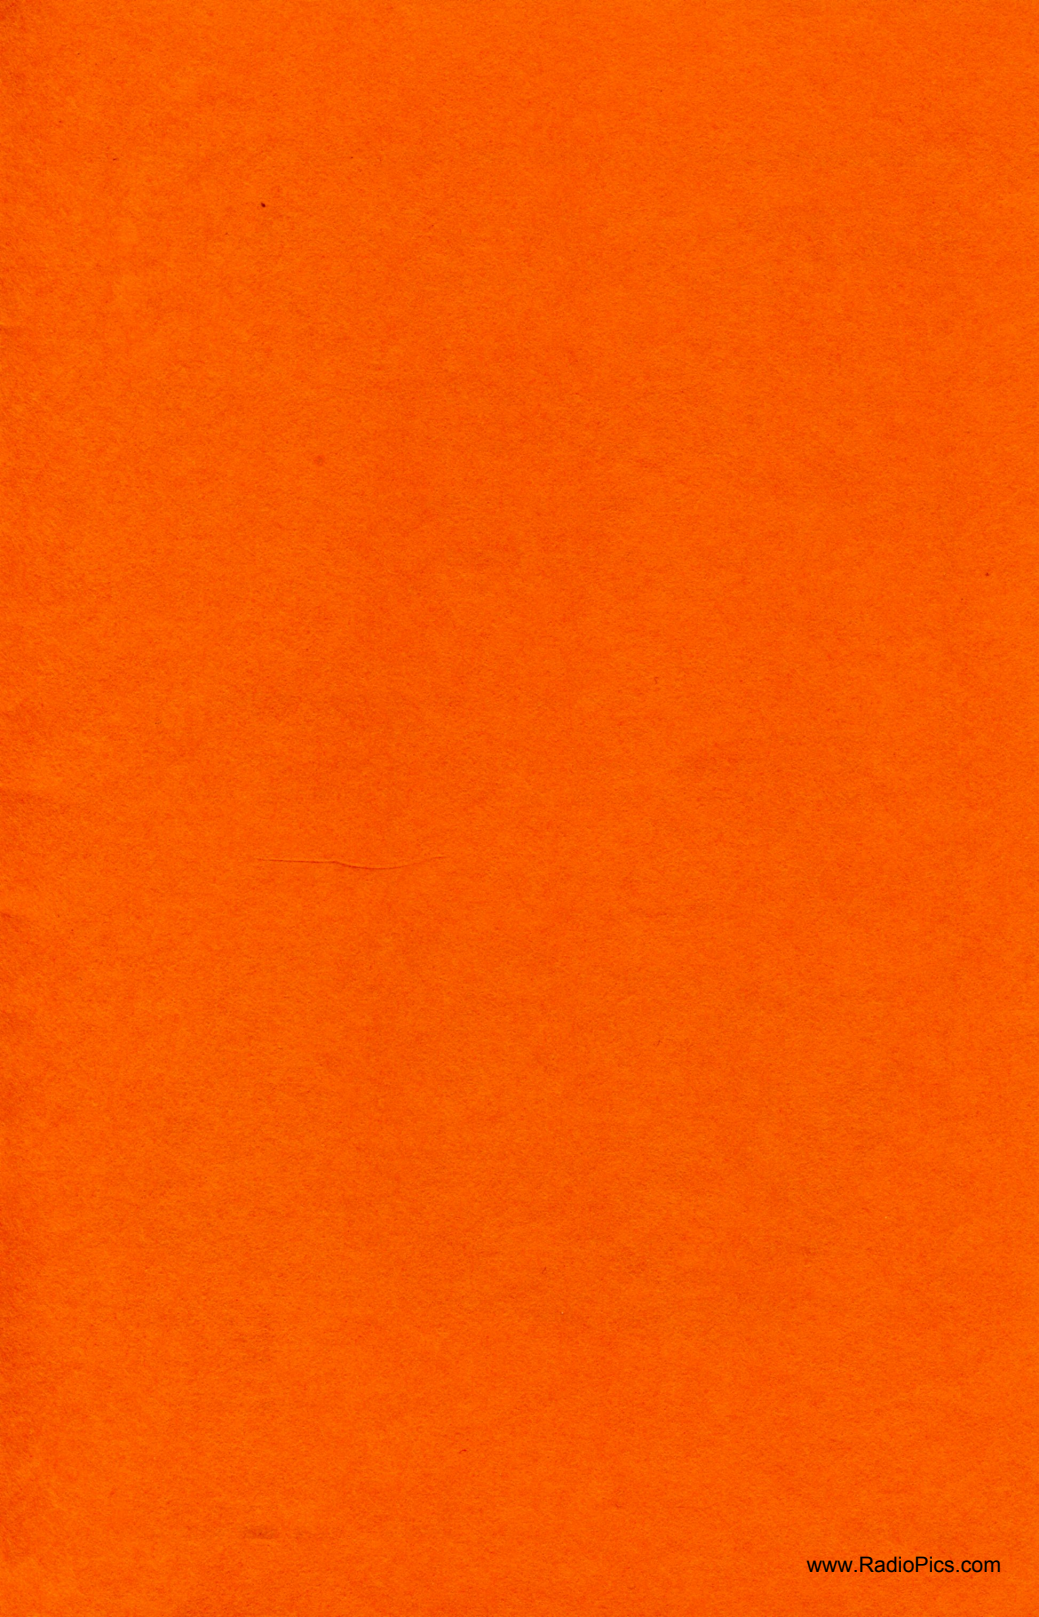

REGENCY SCANNERS LIMITED WARRANTY

1. The warranty applies to the original or subsequent owners of the product for a period of 1 year from the original purchase date.
2. We agree to repair or replace all parts showing defects in material or workmanship.
3. Warranty service will be provided free of charge if unit is delivered to us intact, transportation charges prepaid, accompanied by dated proof of purchase within one year of the date of sale to the original purchaser.
4. The warranty does not apply to units subject to misuse, neglect, accidents, incorrect wiring not our own, improper installation, or units used in violation of the instructions furnished by us. Nor does the warranty apply to units: damaged by lightning, excess current, repaired or altered outside the factory, or units with altered or removed serial numbers.
5. To have your unit serviced under the warranty return it, freight prepaid, with proof of purchase receipt, to:
Customer Service Department
Regency Electronics, Inc.
7707 Records St.
Indianapolis, IN 46226

Only factory personnel are authorized to perform warranty service.

NOTE: When returning unit for warranty service, do NOT include any accessories (antenna, power cord, memory battery, etc.).

6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.